



CHECKING COMPRESSION PRESSURE

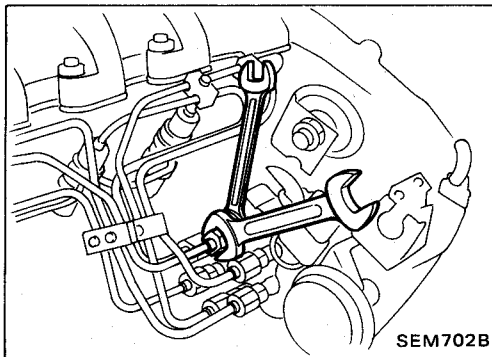


1. Warm up engine sufficiently.
2. Disconnect injection tube on nozzle side and loosen injection tube on pump side.


Use two wrenches to prevent delivery holder on pump side from loosening.

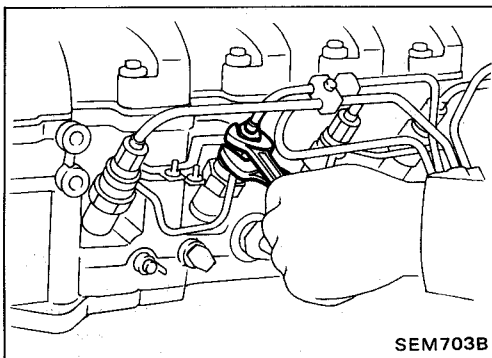

3. Remove spill tube assembly.
To prevent spill tube from breaking, remove it by gripping nozzle holder.

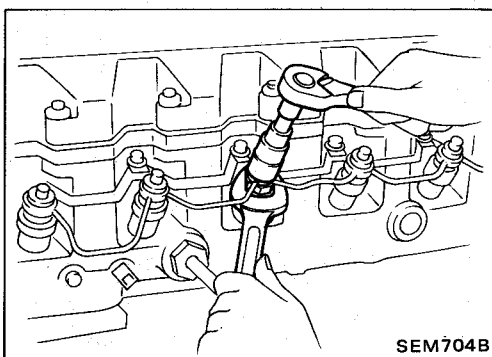

4. Remove all injection nozzles using Tool or a suitable tool.

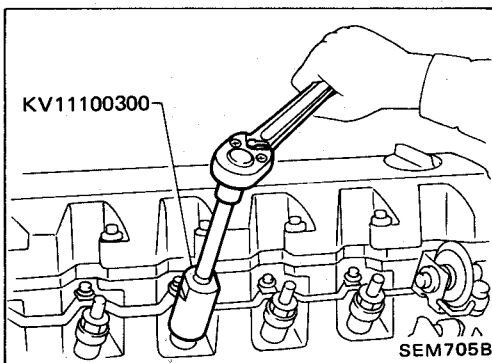

5. Fit compression gauge adapter to cylinder head.

