


CHECKING COMPRESSION PRESSURE

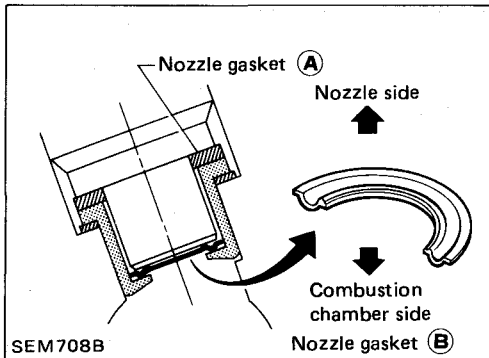


9. Replace nozzle gaskets and install injection nozzles.

New nozzle gasket installation direction is as shown.

Nozzle to cylinder head:


 : 59 - 69 N.m
(6.0 - 7.0 kg-m, 43 - 51 ft-lb)

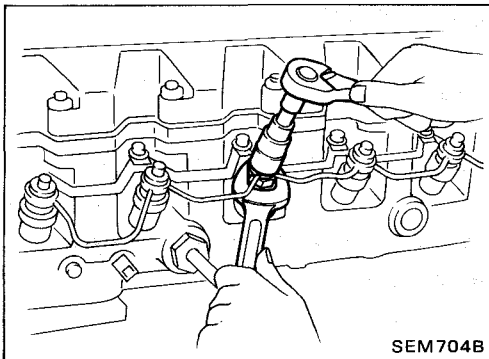

10. Install spill tube by holding nozzle holder.

Spill tube nut:

 : 39 - 49 N.m
(4 - 5 kg-m, 29 - 36 ft-lb)

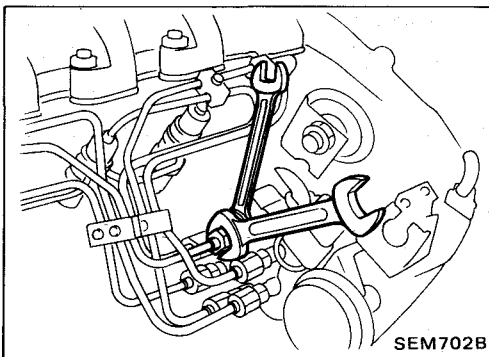

11. Install injection tubes.

Injection tube:

 : 22 - 25 N.m
(2.2 - 2.5 kg-m, 16 - 18 ft-lb)

Use two wrenches to prevent delivery holder on pump side from becoming loose.

